


**INSTRUCTIONS FOR USE AND INSTALLATION
TOASTERS
TS 1270 / TS 3270**



Made in France

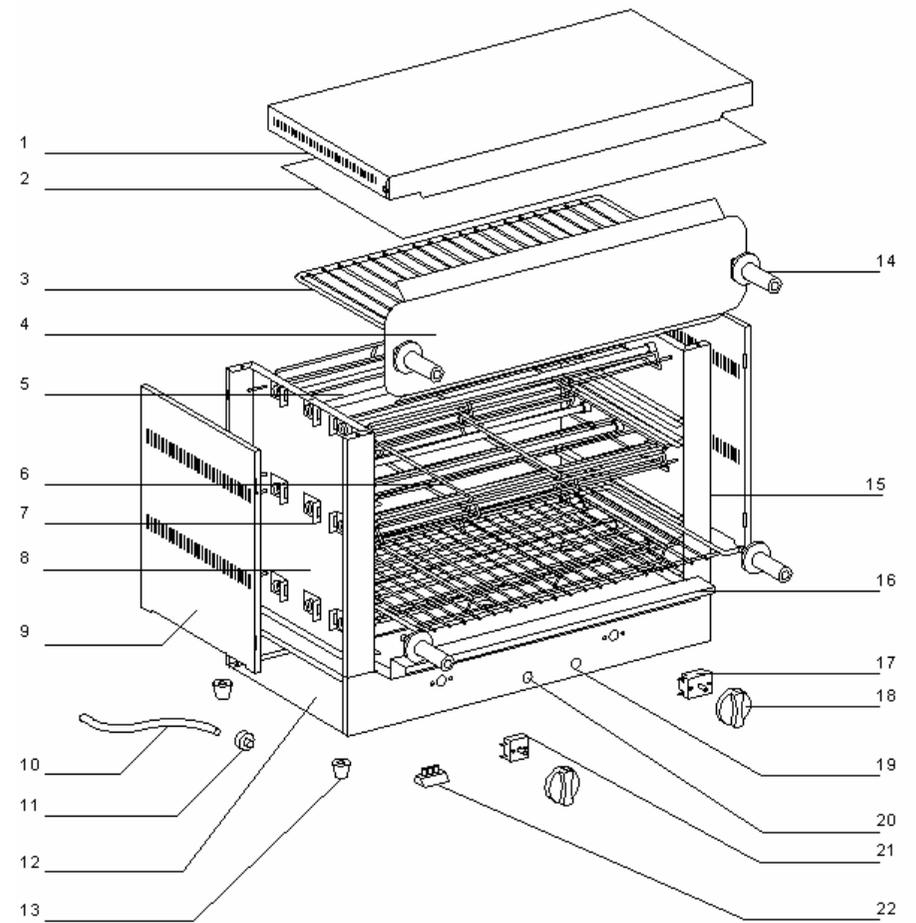

TOASTERS

TS 1270 / TS 3270

Nomenclature **TS 3270**
Spare parts **TS 3270**

Rep	Code	Qty	Pièce	Spare part
1	44043	1	Toit	Roof
2	44044	1	Toit intérieur	Inside roof
3	F01062	2	Grille	Grid
4	44035	1	Bandeau grille	Grid deflector
5	D04033	9	Résistance + tube quartz	Tube quartz assembly
6	F01026	4	Grille protége tubes	Tubes protecting grid
7	B07025	18	Clips	Clips
8	44040SE	1	Montant gauche	Left upright
9	44036	2	Flasque	Wall
10	C01045	1	Cable	Cord
11	A10032	1	Presse étoupe 16	Cord closer 16
12	44037	1	Fond socle	Bottom enclosure
13	A13017	4	Pied	Foot
14	A17010	4	Poignée support grille	Grid holder handle
15	44039SE	1	Montant droit	Right upright
16	44041	1	Plat	Tray
17	A02002	1	Minuterie	Timer
18	A14078	2	Bouton	Knob
19	A08009	1	Voyant vert	Green pilot light
20	A08003	1	Voyant orange	Orange pilot light
21	A01017	1	Commutateur	Commutator
22	A16013	2	Bornier 3 trous	Three holes domino

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions and keep it systematically with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the surfaces of cooking are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- At the end of cooking, before cleaning the appliance, do not forget to disconnect it.

2. CONTENTS OF CARDBOARD PACKAGING

Device: A toaster with protecting grids

- Accessories:
- One tray
 - One cooking grid with handles
 - One cooking grid with deflector (TS 3270 only)
 - The present note

See exploded views for TS 1270 / TS 3270 at the end of the document.

3. CONFORMITY OF USE

Use the appliance only to cook, reheat, glaze, brown, toast... in quantity your croque-monsieur, pizzas, quiches, cheese/meat puffs...with no preheating, smokes or odours

4. WAY OF FUNCTIONING

Unique in the world, these salamanders toasters with 1 or 2 levels and 2 or 3 quartz tubes lines enable to defrost, brown, glaze, grill or toast every kind of dishes.

For fast service, the top part of the salamander (TS 3270) is closed and fitted with a tray with handles.


According to the dimension of the machine, you can cook instantly at core with no smoke and odour thanks to the rays of the infrared quartz tubes from 200 to 400 toasts per hour.

Preheat is not necessary as the temperature rise is very fast, less than 30 sec.

To turn on the toaster, just action the commutator (n°1 on picture) on the desired position (from 2 to 4), turn on the timer (n°4 on picture) according the desired cooking time. The orange pilot light (n°2 on picture) ignites. Your machine is working


The selection of the cooking zone is made through the commutator

Never use the toaster without its tray (n°5 on picture)

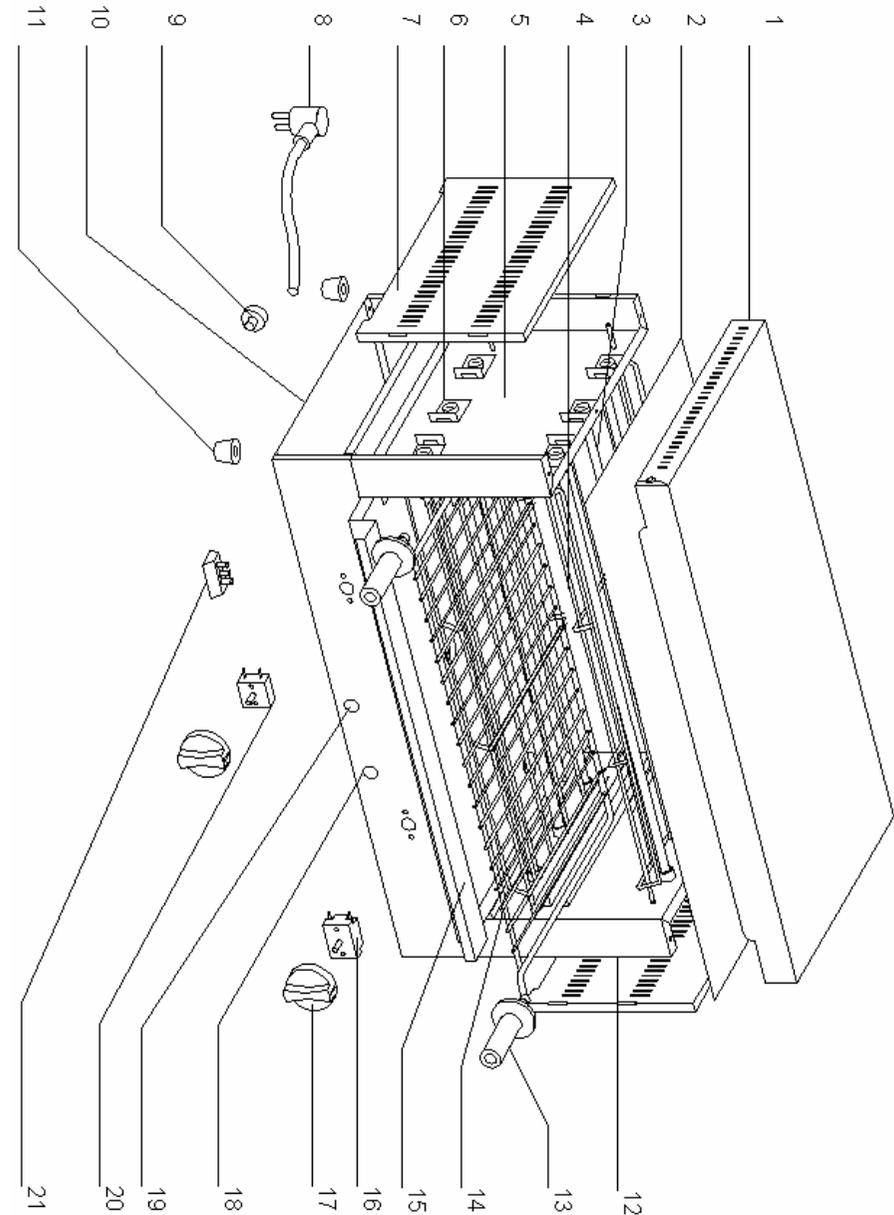

Nomenclature **TS 1270**
Spare parts **TS 1270**

Rep	Code	Qty	Pièce	Spare part
1	44043	1	Toit	Roof
2	44044	1	Toit intérieur	Inside roof
3	D04033	6	Résistance + tube quartz	Tube quartz assembly
4	F01026	2	Grille protége tubes	Tubes protecting grid
5	44048SE	1	Montant gauche	Left upright
6	B07025	12	Clips	Clips
7	44046	2	Flasque	Wall
8	C03013	1	Cordon avec prise	Cord with plug
9	A10032	1	Presse étoupe 16	Cord closer 16
10	44037	1	Fond socle	Bottom enclosure
11	A13017	4	Pied	Foot
12	44047SE	1	Montant droit	Right upright
13	A17010	2	Poignée support grille	Grid holder handle
14	F01062	1	Grille	Grid
15	44041	1	Plat	Tray
16	A02008	1	Minuterie	Timer
17	A14078	2	Bouton	Knob
18	A08009	1	Voyant vert	Green pilot light
19	A08003	1	Voyant orange	Orange pilot light
20	A01017	1	Commutateur	Commutator
21	A16013	1	Bornier 3 trous	Three holes domino

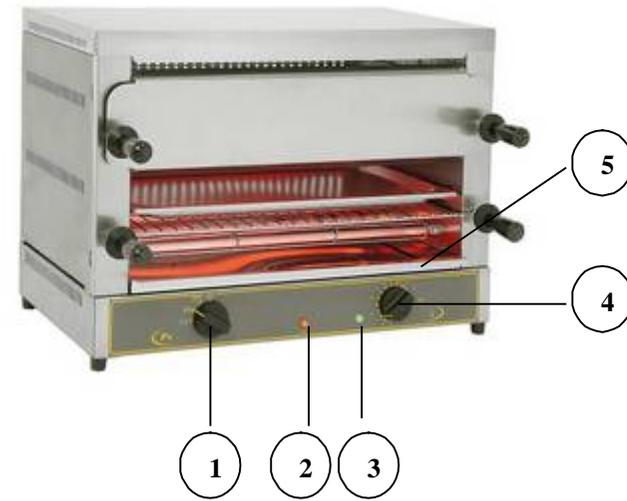

- 1 Commutator
- 2 Orange pilot light
- 3 On/off pilot light
- 4 Timer
- 5 Tray

5. FUNCTIONING / MANIPULATION

a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place it on a plane and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- Remove the protective films

b) First starting:

During the first use, warm your machine up outside to evacuate residual smokes of manufacturing oil from the metallic parts. This may emit a slight smell for a few moments.

First cleaning

Clean the device before the first use. (See 6. Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged. If necessary, it has to be replaced by the manufacturer, its after sale service or any qualified person to avoid any risk.
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

c) Use of device :

Elements of command and display

Command/Display	Function
Commutator 4 positions (n° 1 on picture) : Position 1 Position 2: Toaster/salamander Position 3: Pizza oven Position 4	Stop Bottom and middle quartz tubes on Top and middle quartz tubes on All the tubes warm
Orange pilot light (n°2 on picture)	Machine is on
Green pilot light (n°3 on picture)	On/off
Timer 15 min (n°4 on picture)	Cooking time

Putting on

Turn on the commutator (n°1 on picture) on the wished position.
Turn on the timer control knob (n°4 on picture) on the wished cooking time
The orange pilot light (n°2 on picture) ignites. The machine is on.

You can use your toaster in continuous by turning the timer on left side from position 0. Caution : do not forget to turn off your pizza oven after use.

Temperature setting

Set the power desired by positioning the commutator (n°1 on picture) to the wished position.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

Wires colours correspondence

Phase 1	Brown
Phase 2	Black
Phase 3	Grey
Neutral	Blue
Earth	Yellow-Green

Stopping the appliance

Set the timer (n°4 on picture) on 0
Set the commutator (n°1 on picture) on 0: the appliance is no longer functioning.
Disconnect the power cable.
Clean the appliance. (see 6. Cleaning)

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-48
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021
2002/95/CE (ROHS)
2006/95 CE
2004/108 CE



Reach rule

Never put the device among household waste.
The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

- Disconnect the device.
- Let cool completely the device before any technical intervention or cleaning.
- Never clean the quartz tubes when they are hot
- Avoid touching quartz tubes with your fingers but use a cloth moistened with spirit.
- Clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in a irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.

7. TECHNICAL SPECIFICATIONS

Models	TS 1270	TS 3270
Outside dimensions	640x380x330 mm	640x380x475 mm
Weight	15 Kg	18.5 Kg
Power	2600 W	4000 W
No quartz tube	6	9
Current	11 A	17.4 A
Voltage	220-240 V ~	380-440 V 3 N ~